 


vitaaudio

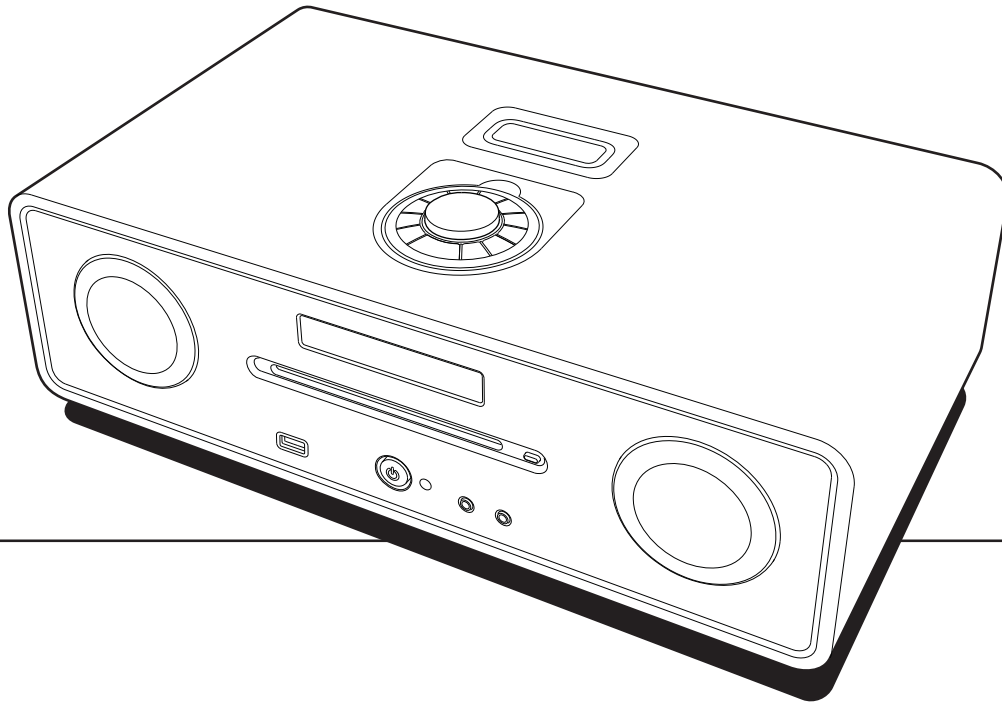

 
User Guide

Quick Start


Important information:

Please read this manual carefully before operating your R4 and retain for future reference.

1 Connect aerial

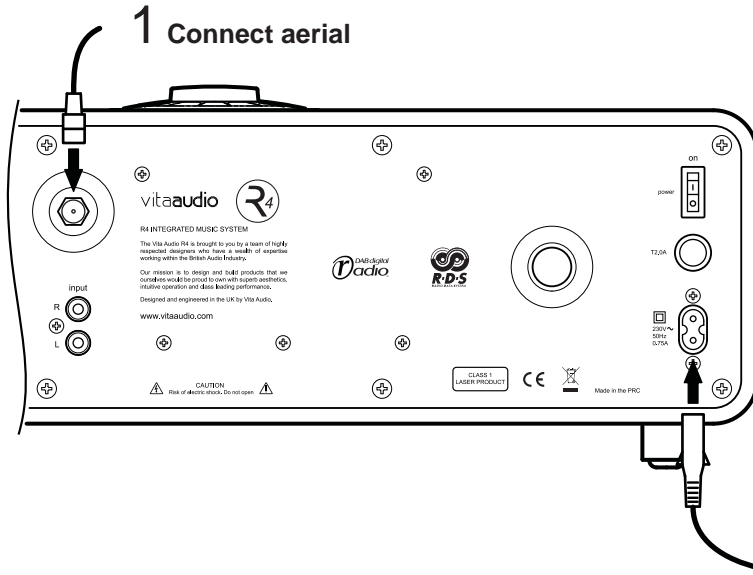


2 Connect power lead

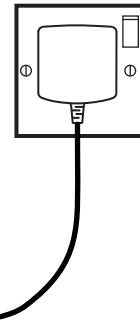 


3 Insert batteries

 
Remove magnetic base and insert noting polarity.

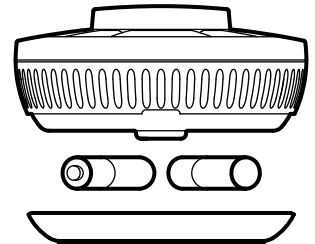

4 Switch on power at rear

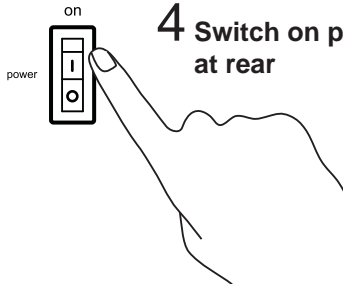 

5 Press standby

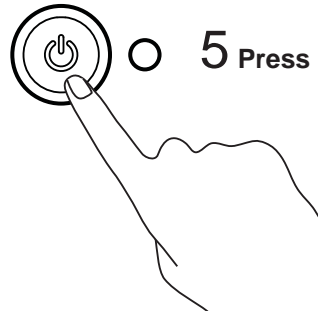 

6 Wait.....

Automatic tuning will search for DAB stations available in your area.



..... to Radio

DAB : press ▼ ▲ to scroll through available stations.

OK to select station.

FM : press and hold ▼ ▲ to scan for next available station.

 


..... to CD

Inserting a CD into slot will automatically select CD source.

CD will auto play once loaded.

PLEASE NOTE: CD source must be selected to eject disk.

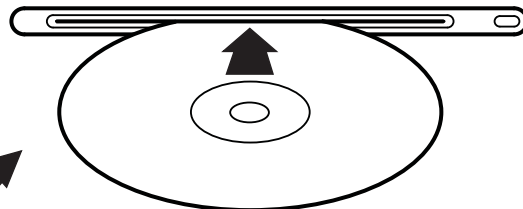


7 Listen.....

First select your chosen source. (see page 4)


..... to USB

 Insert USB into slot. R4 will search for MP3 / WMA music files and auto play once loaded.

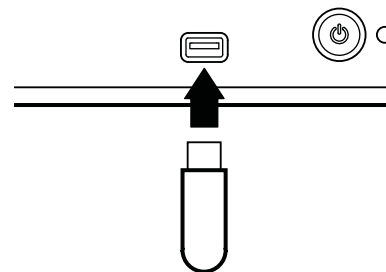

..... to iPod

Remove dust cover, insert iPod into dock and press ►|| after iPod has connected.

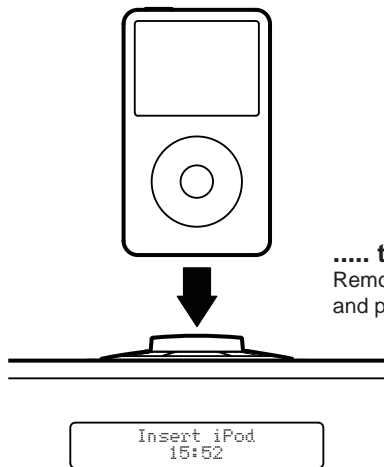 

Remote control

AUDIO

Press **AUDIO** to cycle through settings (3D Sound, Loudness, EQ). Editable options will flash. Use **▼ ▲** keys to change. **OK** to confirm.

CLOCK

Press **CLOCK** to cycle through Alarm, Sleep and Manual Clock Set.

To set alarm

Select Alarm, press **OK**. ON/OFF will flash. Use **▼ ▲** and **OK** to set alarm time, source and volume. Once set, screen will 'time-out' after 5 seconds.

 on display indicates that alarm is set.

To set sleep

Select Sleep, press **OK**. ON/OFF will flash. Use **▼ ▲** and **OK** to set timer. Once set, screen will 'time-out' after 5 seconds. An 'S' indicates that sleep is active.

Manual clock set

Use this utility to set time if you are in an area where R4 cannot automatically collect time data from DAB or FM with RDS services.

To view alarm settings

Short press **CLOCK**

Alarm ON/OFF

Short press **CLOCK**
Press and hold **OK**

RADIO PRESETS

Store 5 DAB and 5 FM stations

Select preset station - press 1-5

Store station - press and hold 1-5

SOURCE

Press **SOURCE** (current source will flash) and then use **▼ ▲** keys to cycle through DAB, FM, CD, USB, AUX, iPod. Press **OK** to select.

INFO

 
Press **INFO** to cycle through on screen information.

DAB Mode

- Program details / Artist / track name
- Signal strength
- Band and frequency
- Program type - e.g. Classic, Pop
- Broadcast type and data rate
- Multiplex name
- Time and date

FM Mode

- RadioText - Program details
- Signal strength
- Music type - e.g. Classic, Pop
- Audio mode - Auto (stereo) / Mono
- Station name
- Time and date

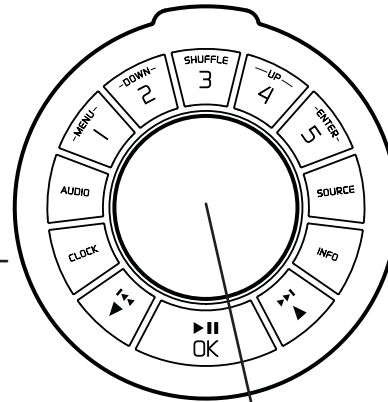

Standby - press to switch ON/OFF



Volume - rotate left or right

 


Snooze - press when the alarm sounds to activate 5 minute timer




Cancel alarm - press and hold

iPod, CD and USB controls

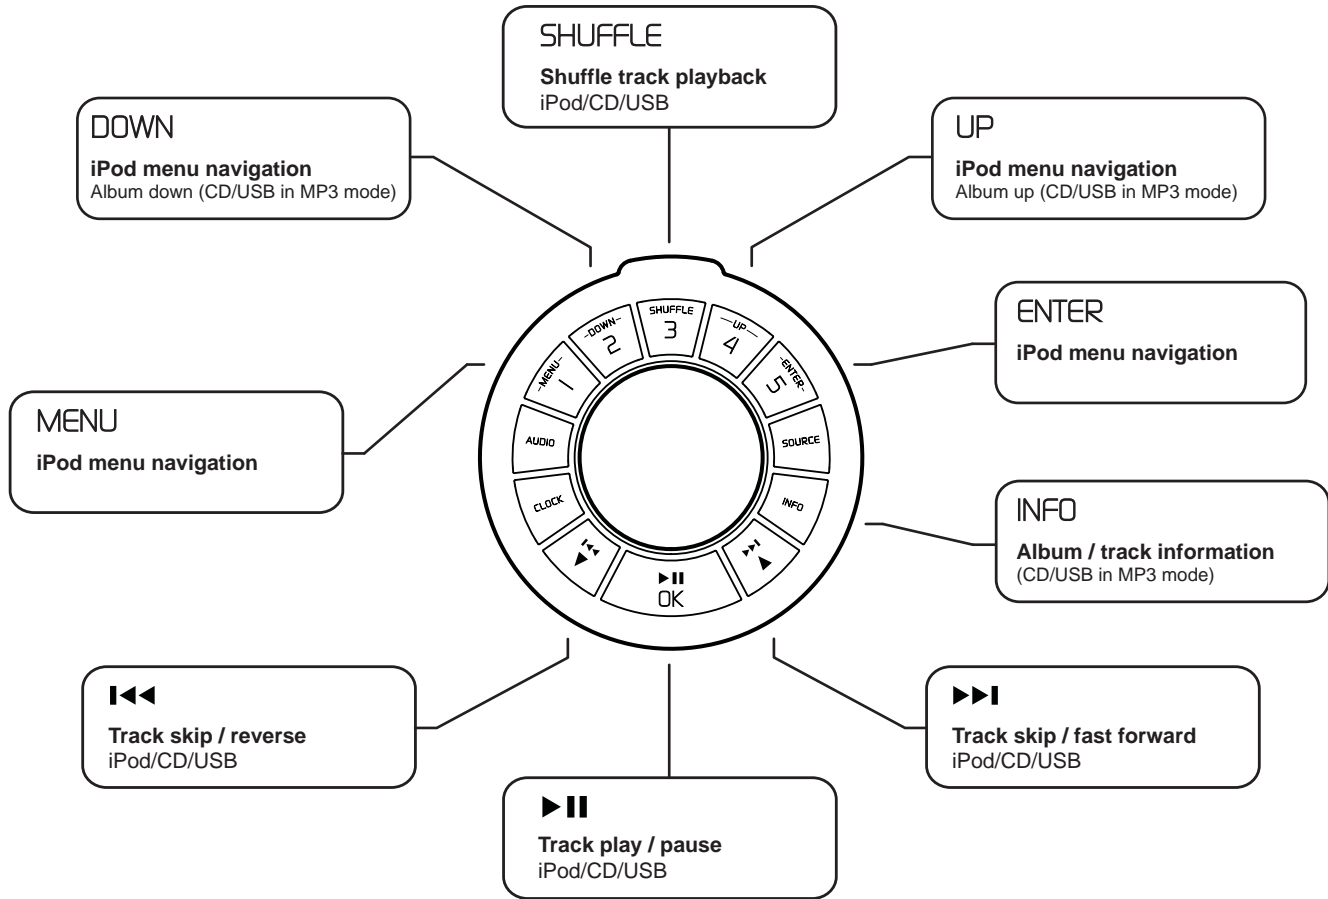

Getting to know your R4

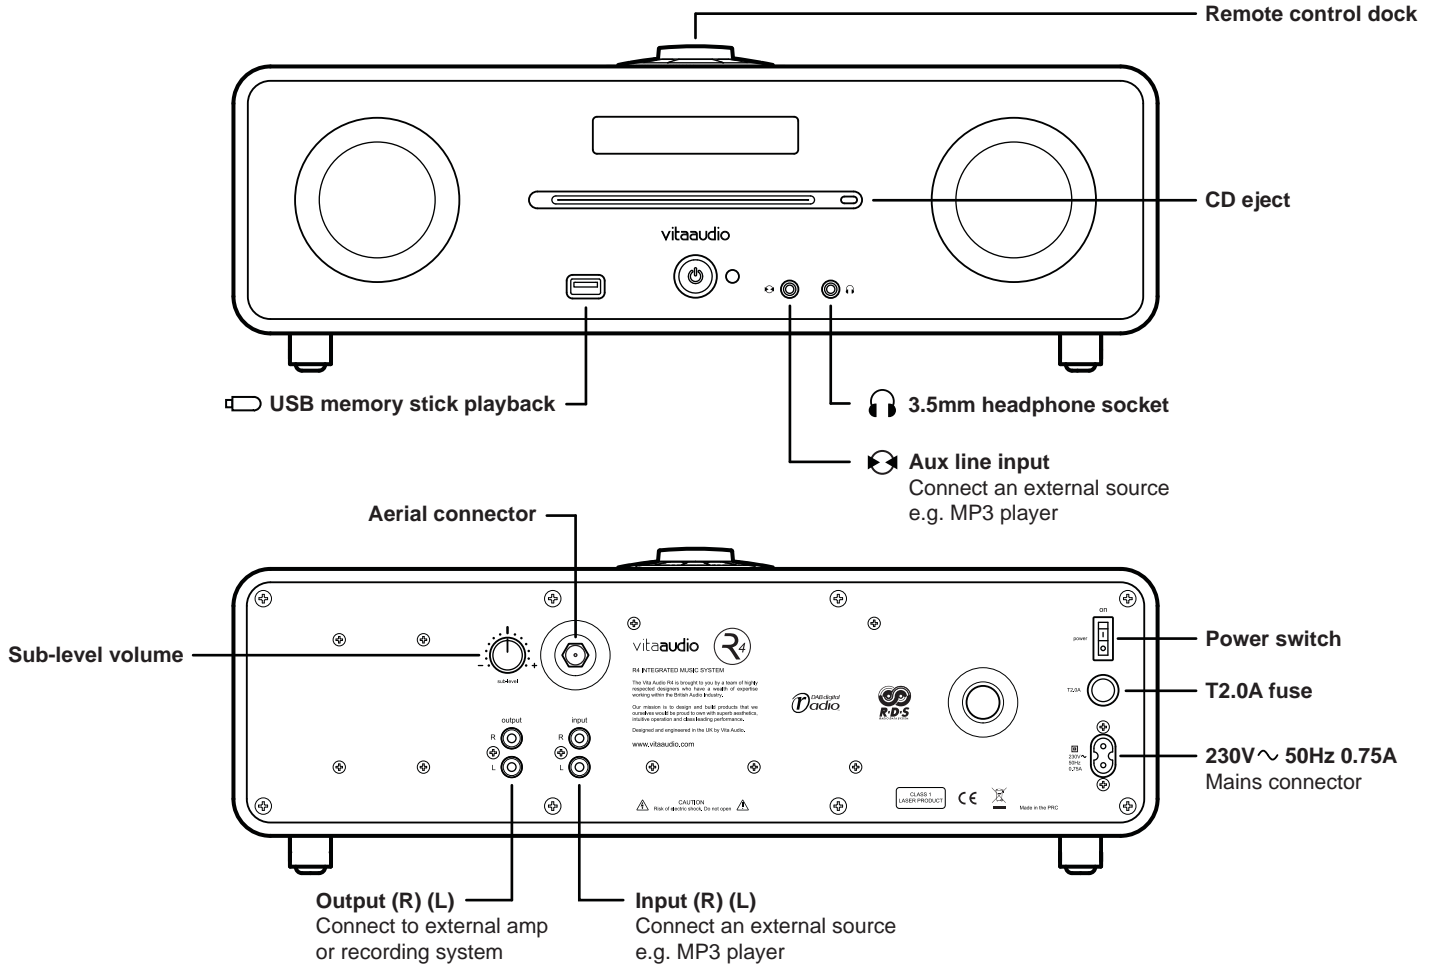 

Other functions

Secondary stations

Some DAB stations have secondary services available. This is shown by a > sign after the station name. Press OK to toggle between the main station and secondary service.

FM Mode – Auto (Stereo) / Mono

In FM mode the R4 will adopt stereo as its default setting however for weak stations it is possible to reduce background noise by switching to Mono. Press and hold OK to switch between Auto (Stereo) and Mono.

Manual Tune, Auto-tune and System Reset

By pressing and holding the INFO key you can cycle through sub-functions. Press OK to enter each.

Manual Tune (DAB Mode): If you know the channel and frequency of a DAB station you can use this feature to access stations directly.

Auto-tune (DAB Mode): This performs a new DAB scan and will add new stations as they become available.

System Reset (DAB & FM Mode): This restores R4 to its default factory setting and will initiate a new DAB station scan. If you move to a new location it is likely that the DAB services you will receive may change. Running system reset will clear stations that may no longer be available and replace with those that are.

Remote Batteries

The R4 remote uses type AAAA (LR61) batteries. These are available on-line and through quality electronic stores. They are also known by Duracell type MN2500/MX2500 and Energizer type E96. If for any reason you have trouble finding replacements, please contact us or your distributor directly.

Maintenance

To maintain the performance and finish of your R4 please:

- Clean with a soft lint free duster or slightly dampened cloth.
- Protect the Remote, drive unit and contacts from wax sprays and other substances. Contact with these substances may degrade the system's performance.
- Natural wood finish cabinets will vary and lighten or darken with age particularly when exposed to sunlight.
- Do not expose your R4 to direct sunlight, high humidity, dust, excessive vibration or extreme temperatures all of which can affect the finish, performance and reliability of the unit.
- The recommended operating temperature range is 5°C to 40°C.
- Make sure that liquids, including rain, cannot penetrate the unit.

Specifications

R4 INTEGRATED MUSIC SYSTEM

- 80W RMS 2.1 stereo system with active subwoofer
- Band III DAB Tuner 174 - 240 MHz
- FM Tuner 87.5 - 108 MHz
- CD player accepts CD-DA, CD-R/RW, WMA & MP3 format disks
- USB socket supports WMA & MP3 encoded music files
- ID3 tag support for MP3 files on CD or USB
- iPod Dock supports: iPod Classic, iPod Nano 3rd generation (video), iPod Touch, iPod mini, iPod with colour display, iPod 4th generation, iPod nano, iPod nano 2nd generation, iPod with video (5th generation)
- 2 x 3.5" custom full range speaker units
- 1 x 5" custom long throw bass speaker unit
- Aerial: Removable telescopic with F-Type connector
- Dimensions: H145 x W450 x D255mm (5.75 x 17.75 x 10 ins)
- Weight: 8 kg (17.6 lbs)
- Mains Power: 230V AC - 50Hz

Guarantee Information

We guarantee this product to be free from defects for a period of two years from date of purchase providing due care and attention has been paid. Product failure through accidental damage (however caused), excessive wear and tear, negligence or unauthorized modification will void your guarantee.

Should you experience a problem with your radio please in the first instance contact your dealer or if this is not possible contact us directly. Where possible the product should be returned in its original packaging. If it is not possible to return the product by hand, then it should be sent carriage prepaid by a reputable parcel carrier. If the original packing is not available, replacement packing can be purchased from us.


Guarantee for Overseas Sales

The distributor in the country of purchase guarantees products purchased outside the UK. For details, please contact your local Vita Audio distributor or outlet.

THIS GUARANTEE IN NO WAY VARIES OR REMOVES THE PURCHASERS STATUTORY RIGHTS. E&OE



iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

vitaudio a division of 

59 Tailors Court - Temple Farm Industrial Estate - Southend on Sea - Essex - SS2 5TH - UK
Tel: +44 (0) 1702 601 410 Fax: +44 (0) 1702 601 414 info@vitaudio.com www.vitaudio.com